

Moisture Muncher® drying agent

- INSTRUCTIONS FOR USE -

What is it? Moisture Muncher drying agent: performs one simple task – it absorbs surrounding moisture in the air. The package you purchased is vapor-resistant and contains 3 “1 unit” packs of drying agent. Once you open the plastic bag, it starts absorbing (*Note:* Do not open the individual packs containing moisture absorbing granules). Immediately, place the unused portions in a small airtight container to keep it fresh. A small glass jar with airtight lid or thick resealable plastic will do.

How does it work? Moisture Muncher can absorb up to 20% of its own weight. Each unit of Moisture Muncher contains blue indicating crystals, which let you know when there is NO absorbing power left. As Moisture Muncher absorbs moisture, the blue indicating crystals turn light pink in color. When this happens, replace Moisture Muncher. You can reactivate Moisture Muncher by baking it in an oven (See important reactivating instructions below).

How do I use it? Moisture Muncher will only be effective when used inside an airtight container (i.e. waterproof case, thick, resealable plastic bags, etc.) along with the valuables you want to keep dry. The area inside the container will become moisture free. Every time the container is opened, the moisture level will rise again. When you close the container, Moisture Muncher can once again remove the moisture in the container. The more times you open the airtight container, the faster the indicating crystal will turn pink.

How much do I use? One unit or pack of Moisture-Muncher should be used for every cubic foot of container space. Use more, depending on how well the container is sealed, how many times the container is opened, and for very high levels of humidity.

Reactivating Instructions: After the blue indicating crystals have turned pink in color, the Moisture Muncher is at full capacity and will no longer absorb moisture. You may reactivate Moisture-Muncher in a full-size oven by carefully following these instructions:

Place packets on cooking tray, with white side facing up. Pre-heat the full-sized oven to a maximum temperature of 93° Celsius (200° Fahrenheit). Make sure to use an oven thermometer and check that the oven does not exceed 93° Celsius (200° Fahrenheit). Place cooking tray with packets in the middle oven rack and away from the heating elements. Bake for approximately 2 hours or until indicating crystals turn from a light pink color to blue. Reactivating should only be done **twice**. Every time Moisture-Muncher is activated, it loses some of its absorbing power.

WARNING:

Do not exceed baking temperatures of 93° Celsius (200° F) or Moisture Muncher will melt or burn. Do not leave oven unattended during the reactivation process. Do not use microwave or toaster oven to reactivate Moisture Muncher. Use full-size oven only.

PIONEER RESEARCH

97 Foster Road, Suite 5 • Moorestown, NJ 08057 • (856) 866-9191 • Fax: (856) 866-8615
email: service@sealife-cameras.com or visit our web site: www.sealife-cameras.com